



MEDISCA[®]
YOUR TRUSTED PARTNER IN COMPOUNDING

PRODUCT NO.: 6838-01



CHANGE PARTS, PROFILLER 3600 (SIZE 000)

DESCRIPTION: Change parts* for one capsule size include: Caps Tray / Body Sheet Set (A, B, C) / Spacer Plate / Orienter Tray / Capsule Locker

ADDITIONAL INFORMATION:

*Tamper may be required. Please provide your MEDISCA Sales Representative with the FB serial # (located on back of the Filler Base) and the capsule sizes currently being filled on your current capsule machine to ensure that all pieces are included for proper capsule filling.

Related Products:

6837-01: Tamper, 60 Pin, Size 000

Installing Change Parts:



**No Tools
Required**

ProFiller 3600 system's patented design requires no tools or adjustments to change capsule size.



1. Lift out Orienter Tray.



2. Slide new Orienter Tray in place.




3. Unscrew 4 thumbscrews from corners of Filler Base.



4. Remove Body Sheet Set.



5. Switch Spacer Plate.

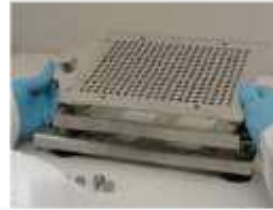

6. Position new size Body Sheet Set on Filler Base.



7. Secure with four thumb screws.