



## Topi-Click Troche-Click, 0.90mL Cavity with Scored Halves and Quarters, Green

**Description:** The Topi-Click Troche-Click is an innovative way to provide an accurate dose to patients in a troche lozenge. It is easy-to-fill, increases pharmacy efficiency and improves patient experience with medications dispensed directly from the disposable mold design.

### Features:

- Each 0.90 mL cavity allows for customizable dosing with scored halves and quarters
- Easy-to-eject with eject button for quick removal
- Heat resistant tray
- Blocks UV
- Large label surface on cover
- Locking mechanism designed to prevent accidental opening
- Multiple color options make it easy for patients to distinguish their medications
- Materials compliant with FDA CFR 21.177 code, which is the requirement for <USP 661>

### Technical Specifications:

<b>Capacity</b>	30 x 0.90 mL
<b>Material</b>	Polypropylene
<b>Label Size</b>	
Cover	3.0" W x 2.0" H
Tray	1.5" W x 0.5" H

USA | Canada | Australia | International


medisca.com

# Filling Instructions



**STEP 1:**  
Place the Troche-CLICK™ tray on a clean, level surface.

Fill the Troche-CLICK™ with mixture. Filling techniques may include: pouring directly from a glass beaker, transferring mixture using a syringe or transfer pipette.

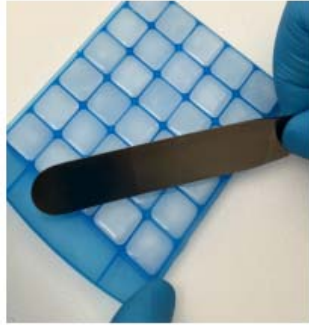

**STEP 2:**  
Remove excess troche material by scraping over the top of the troche lozenges with a clean spatula.

The PEG base shrinks during cooling. Add additional material to the individual cavities, if required.



**STEP 3:**  
After the troche material has set, a heat gun can be used to remelt the top of the troches to provide a polished appearance to the troches.



**STEP 4:**  
Troches lozenges can be removed and then replaced to conduct quality checks.

## Related products:

- Topi-Click Troche-Click, 0.90mL Cavity with Scored Halves and Quarters, White (5494)
- Topi-Click Troche-Click, 0.90mL Cavity with Scored Halves and Quarters, Pink (5495)
- Topi-Click Troche-Click, 0.90mL Cavity with Scored Halves and Quarters, Blue (5496)

USA | CANADA | AUSTRALIA PACIFIC | EUROPE  
WWW.MEDISCA.COM

Please note that the information contained herein is for informational purposes only. The information is based on recognized compendia, manufacturers' instructions and/or other authoritative sources and texts. MEDISCA takes no responsibility for the validity or accuracy of this information. Customer MUST refer to USP, FDA, Health Canada, TGA and/or their State Board to ensure they comply with the specific regulations and ensure that appropriate procedures are in place.